



Garmin Nuvi 2455LMT Touch Screen Replacement

The touch screen replacement is very simple and only takes about 2-5 minutes to complete at most. This guide requires a plastic opening tool.

Written By: Torrance Williams



INTRODUCTION

This guide shows how to remove the touch screen on your Garmin Nuvi 2455LMT through the back panel assembly.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T4 Torx Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Panel Assembly



- Remove the four 2.5mm screws from the back assembly with a Torx #04 Screwdriver.
- Holding the GPS with a free hand while unscrewing the small screws will help stabilize the device.

Step 2



- Use the plastic opening tool on all four sides of the device to open the Garmin Nuvi LMT2455 Back Panel.
- To properly remove the back cover assembly pry open both the back and sides of the assembly.

Step 3



- Open the device carefully being wary of the orange band that is going from the screen to the motherboard.
- Remove the orange band by carefully lifting the lip that connects it to the motherboard.

Step 4 — Touch Screen



- Locate the edge of the screen that fits into the plastic case
- To separate the connector, gently push the tip of a spudger under the clip.
- Then, swing the clip over to the other side of the socket, so that it lays flat against the cable.

Step 5



- Use the plastic opening tool to wedge between the plastic cover and screen.
- Using your hands, gently push the front of the screen towards you to push the screen out of the casing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-22 11:15:25 AM.